

HDMI Matrix Switcher

User Manual

Model: HS10M-4K6G

4K60Hz 10 x 10 HDMI Matrix Switcher Built in Audio Extractor




Introduction

HS10M-4K6G is a 10 input 10 output HDMI matrix switch that can put 10 Hi-res HDMI sources on any of 10 HDMI displays. The HDMI audio extraction function allows you to integrate with your existing premium audio equipment to have superior audiovisual experience. There are multiple options to control and manage the matrix intuitively, including IR remote, RS-232, front panel buttons, Web GUI, Telnet, and Android/iOS mobile APP.


Features

- Resolution up to 4K@60Hz 4:4:4.
- Supports ARC (Audio Return Channel).
- Supports HDMI audio extraction via S/PDIF coaxial output.
- Supports cable locks on each HDMI input & output ports.
- Built-in LCM panel and LED indications for checking the status of all connected devices.
- Rack mountable (1U standard).
- Managed via RS232, front panel buttons, IR remote, WebGUI, iOS/Android APP.

Installation View

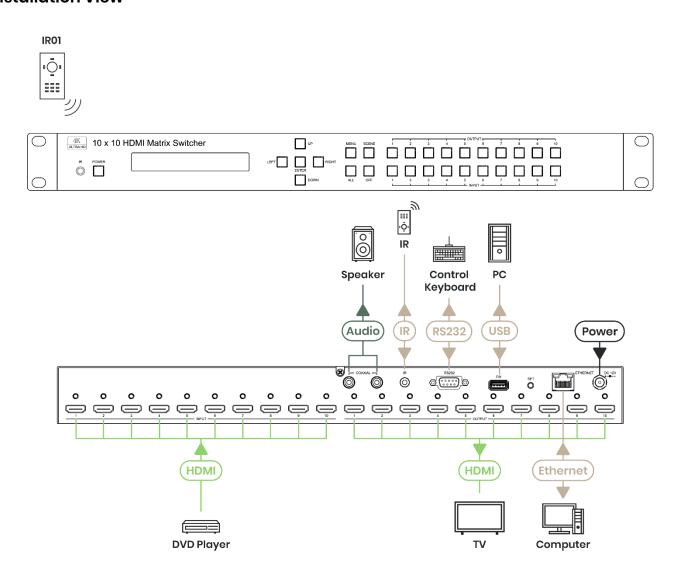


Front Panel View

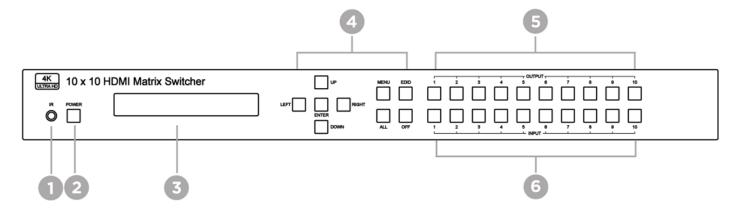

No.	Feature	LED Status	Description		
1	IR receiver	N/A	Receiving IR remote signal		
	2011/52	Blue ON	Power ON		
2	POWER	Red ON	Standby		
3	LCM Display	N/A	Display operating status or Menu.		
	UP Button		Go up direction in Menu.		
	DOWN Button		Go down direction in Menu.		
	LEFT Button	N/A	Go left direction in Menu.		
	RIGHT Button		Go right direction in Menu.		
4	ENTER Button		Execute selected function		
	MENUL Dutton		Press to enter Menu or display current operating status		
	MENU Button		Press and hold 3 seconds to enable/disable KEYLOCK		
	SCENE Button	Blue ON	Save/Load scene		
	ALL Button		Select all output		
	OFF Button		Turn off select output		
	OUTPUT Buttons	Blue ON	Press these buttons to select the desired output		
5			Monitor connected		
		OFF	No monitor connected		
		Blue ON	Press these buttons to select the desired input		
6	INPUT Buttons		Video input detected		
		OFF	No video input		

Rear Panel View

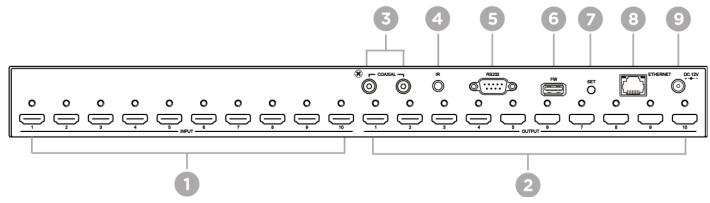

1	INPUT HDMI	N/A	HDMI input port 1~10	
	OUTPUT HDMI	N/A	HDMI output port 1~10	
3	SPDIF	N/A	SPDIF audio output port 1~2	
4	IR	N/A	External IR receiver	
5	CONSOLE	N/A	RS232 command control / Firmware update	
6	FW	N/A	Firmware update	
7	SET	N/A		
8	RJ45	N/A	WEB control interface	
9	DC JACK	N/A	Power input	
Nation	* In standby mode, IR remote cannot control matrix but power on matrix only			
Notice	* Please press ENTER to execution any change of menu settings			

Panel Function

Power on Main Screen

HDMI 2.0 10X10 MATRIX Version V1.01

After power on, the main screen will show matrix name and version information.

The matrix will back to main screen if no operations in 30 seconds

Channel Switching

OUT 12345678910 IN 12345678910

Press OUTPUT 1~10 to select HDMI output (multiple selections) then press INPUT 1~10 (single selection) then press ENTER to execute.

SCENE Button

OUTPUT → SAVE **INPUT** → LOAD

Press SCENE button then press INPUT 1 ~ 10 to load the pre-stored scenes, or press OUTPUT 1 ~ 10 to save the current channel settings to a total of 10 scenes then press ENTER to execute

ALL Button

OUT 12345678910 IN 1111111111

Press ALL button and the number on the second line of IN will flash. Press INPUT 1 ~ 10 to select input port or OFF button to turn off all output then press ENTER to execute.

OFF Button

OUT 12345678910
IN XXXXXXXXXX

Press OUTPUT 1 ~ 10 then press OFF to turn off the selected output, or ALL to turn off all outputs then press ENTER to execute.

Key Lock

KEYLOCK!

Press MENU button for 10 seconds to enable/disable key lock function.

Main Menu

* 1 - SWITCH 2 - SCENE

Press MENU button to enter main menu

Operation

Press UP or DOWN key to move * to select an item for setting and press ENTER key to enter into subpage. When the selected sub-page setting is completed, press the MENU button to return to the main page

LCM Main MENU Function Operations

SWITCH: (Default: 12345678910)

OUTPUT 12345678910 INPUT 12345678910

This function is used to switch the input/output port. Enter the SWITCH menu. Press the ENTER key, then the LCM second line INPUT will flash. Press LEFT or RIGHT button to select the output to be modified. Then press UP or down button to select the input port. After that, press ENTER to confirm setting.

SCENE

OUTPUT	\rightarrow	SAVE		
INPUT	\rightarrow	LOAD		

SCENE function provide 10 sets of channel setting to fast reload for different application.

SAVE

SAV 1H2H 3 4 5 6 7 8 9 10 #01 3 2 3 4 5 6 7 8 9 10

Save current channel setting, press UP or DOWN to select the number and ENTER to save.

It will show input number and status of audio selection.

LOAD

LOD 1A2H 3 4 5 6 7 8 9 10 #01 3 1 3 4 5 5 5 5 5

Reload saved scenes, press UP or DOWN to select the number and ENTER to load.

It will show input number and status of audio selection.

At main screen you could use IR01 remote button B to enter SCENE function, button 1~0 to select port number 1~10 to load.


EDID (Default: LPCM-2CH)


Because the player output display resolution will be based on TV EDID, this Matrix provides two default EDID modes:" BUILD-IN MODE" and "COPY MODE".

BUILD-IN MODE COPY MODE

BUILD-IN MODE

This mode supports video resolution up to 4K 60Hz, audio format support LPCM-2CH\LPCM-7.1\AC3\DTS. After enter BUILD-IN MODE menu, press UP or DOWN key to select then press ENTER to confirm setting.

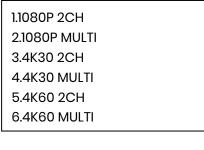


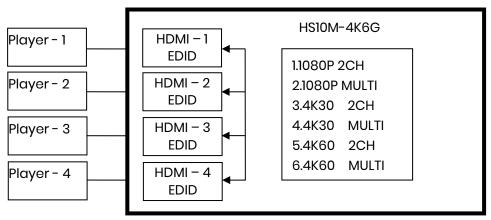

COPY MODE

To fully support the TV resolution and audio mode, the matrix provides "copy mode" to copy TV EDID for input source reference. When use the copy mode, recommend copying the lowest resolution TV EDID. Otherwise it may cause no picture display if the TV resolution is not able to support higher resolution.

After entering COPY MODE menu, press UP or DOWN button to select the OUTPUT (1 to 4) and press ENTER, then press UP or DOWN button to select the INPUT (1 to 4 or ALL) and press ENTER to confirm. If selected output not connected with monitor it will show "NO OUTX HPD" and return to upper menu when press ENTER.

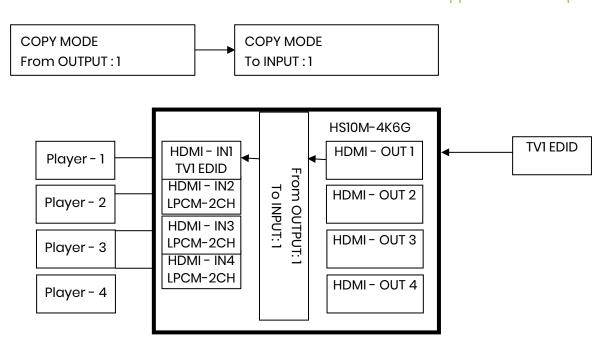

It will show "EDID Write ERROR" if update failed, or "EDID Write OK" if success.

Ethernet

This function can change the network settings of the matrix. Press UP or DOWN key to move * to select an item for setting and press ENTER key to enter into subpage. When the selected sub-page setting is completed, press the MENU button to return to the main page

IP Address: (Default: 192.168.0.10)

IP Address 192.168. 0.10

This function can be setup MATRIX host intranet "IP Address", press the ENTER, the left-most number of second row will flash, then press the UP or DOWN button to change the numbers, press LEFT or RIGHT to move to another location, the move to a position number will flash, press ENTER to complete the setting.

Subnet Mask: (Default 255.255.255.0)

Subnet Mask 255.255.255.000

This function can be setup MATRIX host intranet "Subnet Mask", press the ENTER, the left-most number of second row will flash, then press the UP or DOWN button to change the numbers Press the ENTER, press LEFT or RIGHT to move to another location, the move to a position number will flash, press ENTER to complete the setting.

Gateway: (Default 192.168.0.1)

Gateway 192.168. 0. 1

This function can be setup MATRIX host intranet "Gateway", press the ENTER, the left-most number of second row will flash, then press the UP or DOWN button to change the numbers Press the ENTER, press LEFT or RIGHT to move to another location, the move to a position number will flash, press ENTER to complete the setting.

DHCP Client: (Default Disable)

DHCP Client Disable DHCP Client Enable

When DHCP Clients setup at "Enable", the MATRIX host will automatically get IP Address, Subnet Mask, Gateway, if setup at "Disable", the MATRIX Host IP Address need go through "ETHERNET" menu to set IP Address, Subnet Mask, Gateway, to press the ENTER, the second row will flash, then press the UP or DOWN to select DISABLE, ENABLE, then press ENTER to complete the setting.

Media Type: (Default 100M)

Media Type 100M Media Type AUTO Media Type 10M

This function can be setup MATRIX host intranet "Media Type, press the ENTER, the second row will flash, then press the UP or DOWN button to select 10M, 100M, AUTO, press ENTER to complete the setting.

MAC Filter: (Default Disable)

MAC FILTER DISABLE MAC FILTER ENABLE

MAC Filter can be setup with registered MAC Address in order to connect the MATRIX host Web UI, MAC Address required by the Web page to fill in, this function can only be setup at "DISABLE", "ENABLE", then to press the ENTER, the second row will flash, then press the UP or DOWN to select DISABLE, ENABLE, then press ENTER to complete the setting.

REMOTE ID: (Default ID 4)


This function must be set to match the Matrix remote control IR01 with the matrix itself. A conflict with other devices remote control is avoided.

After entering REMOTE ID menu, press ENTER, the LCM LINE 1 number will flash. Then Press UP or DOWN button to select the number, and then press ENTER to confirm.

When finish REMOTE ID setting, MATRIX remote control IR01 must also set the same ID in order to operation in normal.

IR Remote setting: Press and hold the POWER button, then press the number button which can be set from 0 to 9, total 10 groups. These settings on IR01 remote control have to be done the first time you use the IR01 or when you change the batteries.

REMOTE ID 4

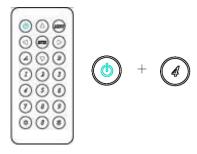

AUDIO SELECT: (Default H)

This function can set the output of SPDIF to HDMI (H) or ARC (A).

OUTPUT 12 AUDIO H H

SYSTEM INFO

Display HS10M-4K6G Matrix firmware version

* 1.MAIN	V1.00	
2.WEB	V1.00	
3.CPLD	V1.00	
4.IN1	V1.00	
5.IN2	V1.00	
6.IN3	V1.00	
7.IN4	V1.00	
8.IN5	V1.00	

8. IN5	V1.00
9. IN6	V1.00
10.IN7	V1.00
11.IN8	V1.00
12.IN9	V1.00
13.IN10	V1.00
14.OUT1	V1.00
15.OUT2	2 V1.00

16.OUT3	V1.00	
17.OUT4	V1.00	
18.OUT5	V1.00	
19.OUT6	V1.00	
20.OUT7	V1.00	
21.OUT8	V1.00	
22.OUT9	V1.00	
23.OUT10	V1.00	

USB UPDATE

Update on boot:

Connect the USB flash drive, select USB UPDATE, and press ENTER to execute the FW update. When the screen turns dark during the update, the screen will display "FIRMWARE UPDATE PLEASE WAIT". After completion, it will restart to the boot screen.

Update in standby mode::

Connect the USB flash drive, press and hold the SET button in back panel, connect the power then release the button after 2 seconds, it will automatically update and reboot to the startup screen after completion.

System reset

After holding down the power button on the front panel and then powering on, until the power button lights up→Wait for the LCM panel screen to display "LCM KEYPAD" →Release the power button, press the "ENTER" key→Wait for the LCM panel screen to display "RESTORE EDID EDID WRITE OK" →Press the "ENTER" key again →The system reset is completed, the power light turns red and shuts down.

Note: After resetting, the EDID, INPUT/OUTPUT switching status and scene settings will be cleared.

Remote Control Function (IR01)

To command the matrix locally, setup the remote control IR01 ID same with the Matrix (see 4.5). The default code is 4. (Power+4)

Warning: These settings have to be done the first time you use the IR01 or when you change the batteries.

IR ID setup: press and hold POWER button, then press Number key

Function

Remote control button define:

Symbol

Symbol		runction		
	Power	Power on/Standby		
	LEFT	LEFT		
	RIGHT	RIGHT		
	UP	UP		
\bigcirc	DOWN	DOWN		
ENTER	ENTER	ENTER		
MIENU	MENU	MENU		
A	Α	ALL		
B	В	LOAD SCENE		
		Quick key 1		
2		Quick key 2		
3		Quick key 3		
		Quick key 4		
(5)				

Quick key 5

Quick key 6 Quick key 7

Quick key 8

Quick key 9

OFF

Quick key 10

Quick key

For example: to switch output port 1 to input port 4, press 1 (OUTPUT 1) and then press 4 (INPUT 4).

* Under using quick key operation, LCM screen will jump to the output / input setting page; it won't allow using the front panel button to operate the HS10M-4K6G Matrix.

Remote Control Function: (CONSOLE)



HS10M-4K6G support RS232 and TCP/IP control by commands as below

For RS232 CONSOLE

Connect the RS232 CONSOLE port to the COM port of the host by a F/M RS232 straight cable (pin 2 to pin 2; pin 3 to pin 3, pin 5 to pin 5).

Communication format is 9600,8, N, 1 (9600 bps, 8 data bits, no parity check, 1 stop bit)



For Ethernet TCP/IP(Winsock): Default IP address: 192.168.0.10, Port:47011

Operation Instruction format:

Computer Commend Code

Command + \(\triangle(Space) + Parameter + Enter (0D0A)

Command + \(\triangle(\text{Space}) + \text{Parameter} + \text{Enter}(0D0A)\) General Setup				
[Command]	[Description]			
POWER△[00]	Set the matrix power OFF			
POWER△[01]	Set the matrix power ON			
TX01△[00]	Set HDMI OUT 1 to OFF			
TX01△[01]	Set HDMI IN 1 to HDMI OUT 1			
TX02△[02]	Set HDMI IN 2 to HDMI OUT 2			
TX03△[03]	Set HDMI IN 3 to HDMI OUT 3			
TX04△[04]	Set HDMI IN 4 to HDMI OUT 4			
AUDIO01∆[p]	Set ARC/HDMI IN to AUDIO 1			
AUDIO02∆[p]	Set ARC/HDMI IN to AUDIO 2			
AUDIO03∆[p]	Set ARC/HDMI IN to AUDIO 3			
AUDIO04∆[p]	Set ARC/HDMI IN to AUDIO 4			
Save & Load Scene:				
[Command]	[Description]			
SAVE△[a]	Save current scene (including ARC), entering			
	commend to save the scene			
LOAD△[a]	Load saved scene (0 \sim 9), entering commend to			
	load scene, Ex: LOAD + \triangle (Space) +3 + [Enter]			
	(Load Scene 3)			
LOCK△[d]	Lock Panel & IR Remote Control, lock(00),			
	unlock(01)			
IRID△[i]	Set IR Remote ID (0~9)			
DHCP△[d]	DHCP Client ON(01)/ OFF(00)			
IP_ADDRESS△[n.n.n.n]	Set IP Address (0~255)			
SUBNET_MASK△[n.n.n.n]	Set subnet Mask (0~255)			
GATEWAY△[n.n.n.n]	Set Gateway (0~255)			
MEDIA_TYPE△[m]	Set Media Type (Network Speed Select)			
	00=auto, 01=10M, 02=100M			
MAC_FILTER△[d]	Mac Filter ON/OFF			
STATUS	Show Connection Status			
VERSION	Show Firmware Version			
HELP	Help			

[Symbol]	[Parameter]
a	01~04
d	00=OFF, 01=ON
i	00~09=0~9
m	00=auto, 01=10M, 02=100M
n	0~255

Example:

TX1△[04Enter]	To route input 4 to output 1
POWER△00Enter	To put in standby the matrix

Commands are case insensitive.


The Matrix will reply OK once string is correct, NG in case of incorrect string

Ethernet Control Function

Initial IP Configuration

- 1. Setup MATRIX IP Address same as your PC with same domains.(Default 192.168.0.10)
- 2. MATRIX IP Address method, please refer. to "ETHERNET" Chapter
- 3. Input IP Address on a web page, you could link to the Web UI of the MATRIX host.
- 4. Web UI Operation:

Switch Setting

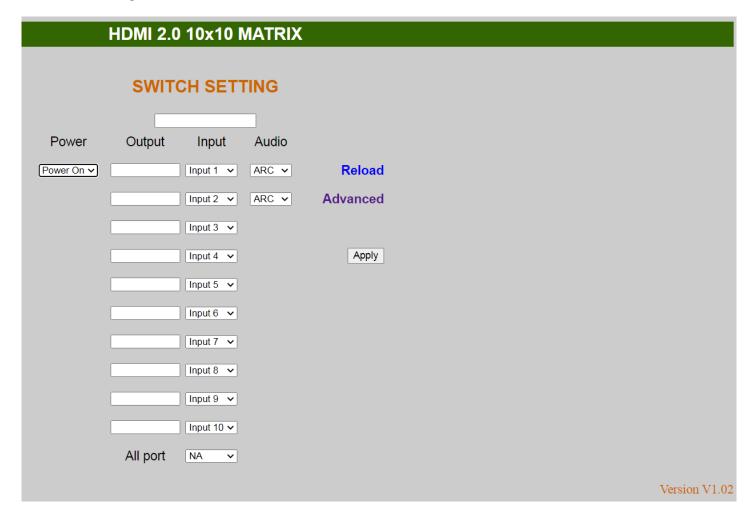

- 1. Power: Control MATRIX power on and standby.
- 2. Output: Display output 1~10, it can change the display name by the Aliases page.
- 3. Input: Display input 1~10, this field is a drop down menu, this field is a drop-down menu, a drop-down menu include Input 1 ~ 10 and OFF, It can change the display name by the Aliases page.
- 4. Audio: Switch Audio function HDMI or ARC
- 5. Reload: Get MATRIX host message.
- 6. Advanced: Enter into the "Advanced" page.
- 7. Apply: Complete the setting
- 8. All Port: Set all output from input 1~10 or off at once.

Advanced

P address	192.168.0.10	
Subnet mask	255.255.255.0	
Gateway IP	192.168.0.1	
Media Type	Auto detect ▼ Disable ▼	
DHCP Client		
Auto Reset (No data input)	2 (1 ~ 255 Minute)	
Device Name	MATRIX-01	
	MATRIX-01	

IP address : Change IP address
Subnet mask : Change Subnet mask
Gateway IP : Change Gateway IP

Media Type : Change 10 / 100 / Auto detect

• DHCP Client : When setup at Enable, the MATRIX host will automatic get IP Address · Subnet Mask · Gateway, If setup at Disable, the MATRIX host IP Address · Subnet Mask · Gateway need to set from Advanced page.

• Auto Reset : The terminal connection people will be 4 users on line at same time, this function could setup the linking time to avoid long time linking and other user cannot use. When over the setting link time, the terminal will automatically disconnect the link. (0: no time setup, 1 ~ 255 Minute time range that can be setup)

Scene : Click to enter Scene setup page
 MAC Filter : Enter to MAC Filter to setup page
 Aliases : Enter to Aliases to setup page
 Device Name : Can change device name

• Back : Jump back SWITCH SETTING page


• Online : Terminal connection users display, the max. 4 users on line.

Aliases

Aliases					
Output		1	Input		
Output 1	Output 1	Input 1	Input 1		
Output 2	Output 2	Input 2	Input 2		
Output 3	Output 3	Input 3	Input 3		
Output 4	Output 4	Input 4	Input 4		
Output 5	Output 5	Input 5	Input 5		
Output 6	Output 6	Input 6	Input 6		
Output 7	Output 7	Input 7	Input 7		
Output 8	Output 8	Input 8	Input 8		
Output 9	Output 9	Input 9	Input 9		
Output 10	Output 10	Input 10	Input 10		
Output 10	Output 10	Input to	mpar 19		

- Aliases page can change input/output name, enter Apply to finish the setting after change
 The
 new name will update and correspond to SWITCH SETTING page Output / Input.
- Press Back jump back to advanced page.

MAC Filter

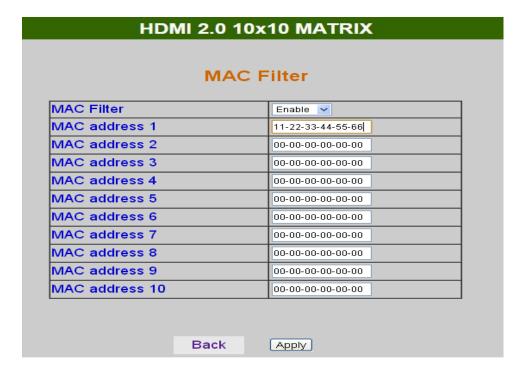

- MAC Filter can be setup as registered MAC Address to link MATRIX host Web UI, the max. up to 10 groups MAC Address
- After MAC Address fill in, select Enable and press Apply to complete the setting.
- Press Back jump to advanced page.

Scene

HDMI 2.0 10x10 MATRIX				
	Scene			
Save	Load 1 2 3 4 5 6 7 8 9	10		
Save1	Load1 01_02_03_04_05_06_07_08_0	9_10		
Save2	Load2 01_02_03_04_05_06_07_08_0	9_10		
Save3	Load3 01_02_03_04_05_06_07_08_0	9_10		
Save4	Load4 01_02_03_04_05_06_07_08_0	9_10		
Save5	Load5 01_02_03_04_05_06_07_08_0	9_10		
Save6	Load6 01_02_03_04_05_06_07_08_0	9_10		
Save7	Load7 01_02_03_04_05_06_07_08_0	9_10		
Save8	Load8 01_02_03_04_05_06_07_08_0	9_10		
Save9	Load9 01_02_03_04_05_06_07_08_0	9_10		
Save10	Load10 01_02_03_04_05_06_07_08_0	9_10		
Back	Update			

• **Save**: Save 10 set of channel settings

• **Load**: Reload 1 of the channel settings

• **Update**: Refresh the status of Load

• Back : Back to Advanced page

Android APP Function

APP name: Matrix Controller



System Requirement

Android 4.0 and up Size: 1.2M

Language: English, Traditional Chinese, Simplified Chinese

Google Play Download Link

https://play.google.com/store/apps/details?id=sct.com.matrixcontroller

Google Play Download QR code



System Setting

Connect mobile phone to Wi-Fi and set the IP/ subnet mask same with matrix network segment Default IP address of matrix is **192.168.0.10**

Default subnet mask is 255.255.255.0

You could also set to DHCP mode, please refer user manual

There are two ways to get the IP address of matrix:

1. Use APP function: Scan Device to get the IP address.

2. Use panel button or IR remote control by press [MENU], select to [ETHERNET] function and press [ENTER] to enter [IP Address] function than press [ENTER], it will show IP Address in the LCD panel of matrix


Main Page



When first time enter the APP will see the main page

Bottom left 「+」 to add matrix
Bottom right 「Info」 to show information

Scan Device

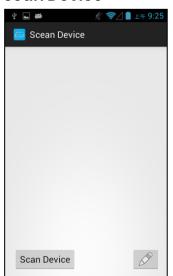


Touch $\lceil + \rfloor$ button at main screen to enter $\lceil \mathsf{Scan} \, \mathsf{Device} \, \rfloor$ page

Touch bottom left 「Scan Device」 to start scan

Touch bottom right pen icon to input the IP address manually

Add Matrix

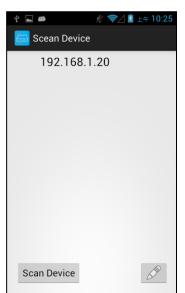

After scanning it will show all matrixes in the list Touch the IP in list to enter 「Add Device」 page



Enter the name of matrix then touch 「Add Device」 to finish setting **Notice**: Name should be unique, not allow duplicate



It will show $\ulcorner \textbf{+} \rfloor$ icon in front of the IP address when finished



Return to main screen you will see the matrix which just add


Modify Device



Press the matrix name to show pop-up dialog



Touch $\ulcorner \text{Modification} \, \rfloor$ to enter modification page.

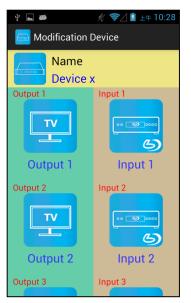


Yellow block shows matrix name and icon

Green block shows name and icon of output devices Brown block shows name and icon of input devices




Touch yellow block to modify matrix name and icon Input the name and select the icon you prefer then touch 「Save」 to finish

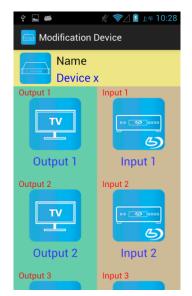

Return to Modification page you will see the matrix have been changed



Touch green block to modify output name and icon Input the name and select the icon you prefer then touch 「Save」 to finish

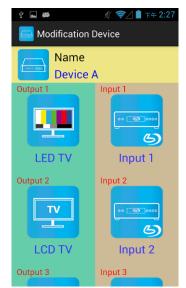

Return to Modification page you will see the output have been changed



Touch brown block to modify input name and icon Input the name and select the icon you prefer then touch 「Save」 to finish



Return to Modification page you will see the input have been changed

Channel Switching mode (load scene, input selection, output selection)



Click device name in list to enter load scene page



Slide right from load scene page to enter input selection mode (as before)



Slide left from load scene page to enter output selection mode (support multiple selection)

Load scene

Modify scene name



Press scene column to show pop-up dialog to modify scene name



After modification touch 「Save」 to save scene name It will return to Load Scene page automatically.

Notice: Name should be unique, not allow duplicate or empty

Read scene status

🦸 🛜 🕍 9:25 ам Load Scene Device X Read 169.254.0.3 10 in/10 out Morning(Scene 1) Please read Scene 2(Scene 2) Please read Scene 3(Scene 3) Please read Scene 4(Scene 4) Please read Scene 5(Scene 5) Please read

Touch top right $\ \lceil \operatorname{Read} \ \rfloor \$ to renew the scene status



It will show pop-up message 「Reading...」 After reading it will refresh scene status



Touch the column name to show pop-up dialog



Touch 「Yes」 to apply scene

Input Selection Mode



Top right 「Refresh」 to renew the status of matrix Below 「Refresh」 button to power on/off the matrix

The block under device are Output 1~ Output 10 (4 by 4 matrix only shows Output 1~Output 4)
Left side shows output device name
Right sideshows current input device name

Bottom left \ulcorner Save Scene $_{\rfloor}$ to save the scenes



Touch output block to enter Channel Selection page

Touch input device to switch or ON/OFF icon to power on/off



It will return to Input Selection page after switching and you will see the input have been changed


Output Selection Mode



Top right 「Refresh」 to renew the status of matrix Below「Refresh」 button to power on/off the matrix

The blocks under device are Input 1~ Input 10 (4 by 4 matrix only shows Input 1~Input 4)
Left side shows input device name
Right side shows current output numbers of devices


Bottom left 「Save Scene」 to save the scenes
Bottom right 「Video off」 to turn off video output

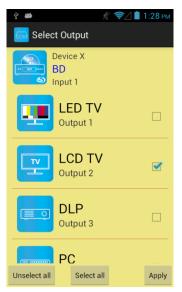

Touch input block or 「Video off」 to enter Output Selection page

It will show connected output of current input

Bottom left 「Unselect all」 to clear all output box Bottom center 「Select all」 to check all output box Bottom right 「Apply」 to apply output setting

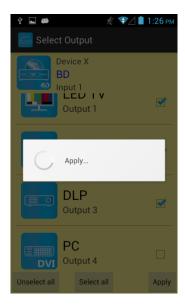

After touch 「Apply」 it will show pop-up message 「Apply...」

It will return to Input Selection page after switching and you will see the numbers of output have been changed


Save Scene



In Input or Output Selection page touch bottom left \(^{\subsection}\) Save Scene \(_{\subsection}\) to enter Save Scene page




Touch the Scene column to show pop-up dialog

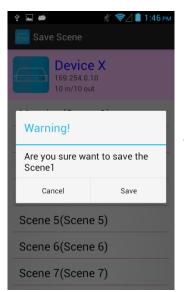

Touch 「Save」 to save current channels setting for all output It will return to Save Scene page automatically.

Delete Matrix

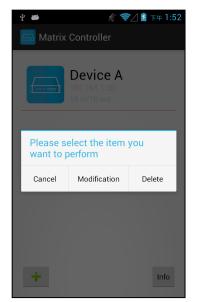

Press the block of matrix in Controller page to show pop-up dialog then touch $\ulcorner \mathsf{Delete}\, \rfloor$



Touch $\ulcorner \, \text{Delete} \, \rfloor$ to delete the matrix

9. iOS APP Function

APP name: Matrix Controller



System Requirement

iOS 7.1 and up Size: 2.3M

Language: English, Traditional Chinese, Simplified Chinese

iTunes Download Link

https://itunes.apple.com/us/app/matrix-control/id904487754?l=zh&ls=1&mt=8

iTunes Download QR code



System Setting

Connect mobile phone to Wi-Fi and set the IP/ subnet mask same with matrix network segment Default IP address of 10 by 10 matrix is 192.168.0.10

Default IP address of 4 by 4 matrix is 192.168.0.200

Default subnet mask is 255.255.255.0


You could also set to DHCP mode, please refer user manual

There are two ways to get the IP address of matrix:

1. Use APP function: Scan Device to get the IP address.

2. Use panel button or IR remote control by press [MENU], select to [ETHERNET] function and press [ENTER] to enter [IP Address] function than press [ENTER], it will show IP Address in the LCD panel of matrix

Main Page

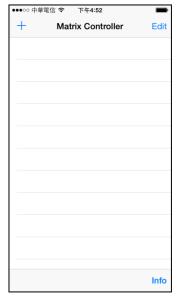


When first time enter the APP will see the main page

Bottom left 「+」 to add matrix

Bottom right 「Info」 to show information

Scan Device

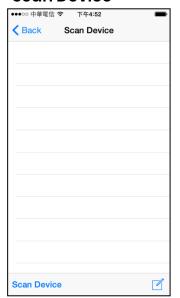

Touch $\lceil + \rfloor$ button at main screen to enter \lceil Scan Device \rfloor page


Touch bottom left 「Scan Device」 to start scan

Touch bottom right pen icon to input the IP address manually


Add Matrix



After scanning it will show all matrixes in the list Touch the IP in list to enter 「Add Device」 page

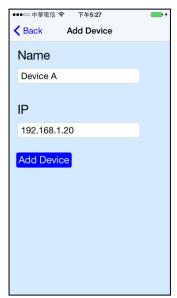

Enter the name of matrix then touch 「Add Device」 to finish setting Notice: Name should be unique, not allow duplicate

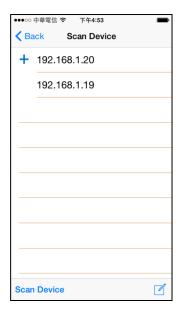

It will show $\ulcorner \textbf{+}_{\bot}$ icon in front of the IP address when finished




Return to main screen you will see the matrix which just add

Modify Device




Touch the gear icon to enter Modification page

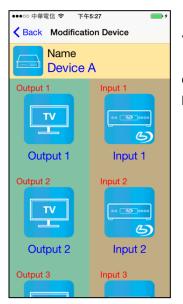


Yellow block shows matrix name and icon

Green block shows name and icon of output devices Brown block shows name and icon of input devices

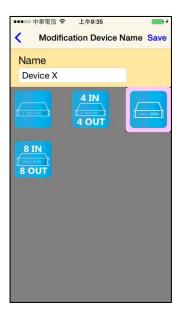


Touch yellow block to modify matrix name and icon Input the name and select the icon you prefer then touch 「Save」 to finish

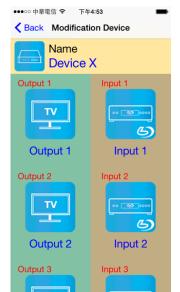


Return to Modification page you will see the matrix have been changed




Touch green block to modify output name and icon Input the name and select the icon you prefer then touch 「Save」 to finish

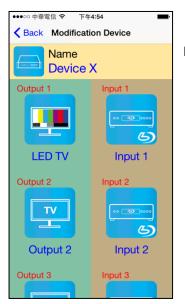

Return to Modification page you will see the output have been changed

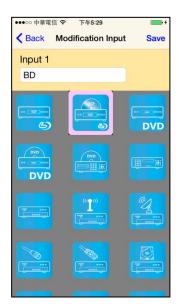


Touch brown block to modify input name and icon Input the name and select the icon you prefer then touch 「Save」 to finish

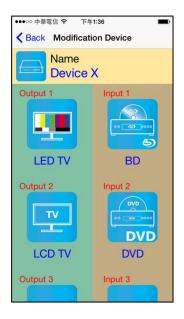

Return to Modification page you will see the input have been changed


Channel Switching mode (load scene, input selection, output selection)

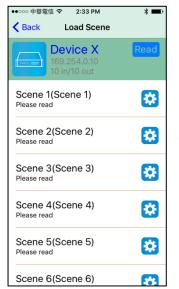

Click device name in list to enter load scene page



Slide right from load scene page to enter input selection mode (as before)

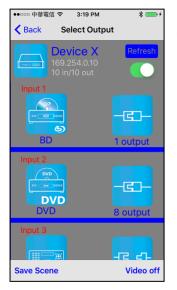

Slide left from load scene page to enter output selection mode (support multiple selection)

Load scene Modify scene name




Touch the gear icon to enter modify scene name



After modification touch 「Save」 to save scene name It will return to Load Scene page automatically.

Notice: Name should be unique, not allow duplicate or empty


Read scene status

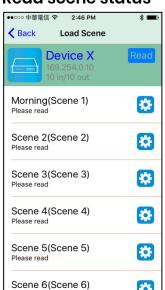

Touch top right 「Read」 to renew the scene status



It will show pop-up message 「Reading...」 After reading it will refresh scene status

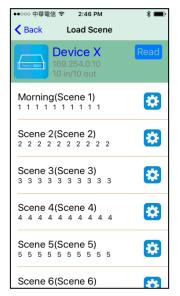

Touch the column name to show pop-up dialog



Touch 「Yes」 to apply scene

Input Selection Mode



Top right 「Refresh」 to renew the status of matrix Below 「Refresh」 button to power on/off the matrix

The block under device are Output 1~ Output 10 (4 by 4 matrix only shows Output 1~Output 4)
Left side shows output device name
Right sideshows current input device name

Bottom left 「Save Scene」 to save the scenes




Touch output block to enter Channel Selection page

Touch input device to switch or ON/OFF icon to power on/off



It will return to Input Selection page after switching and you will see the input have been changed

Output Selection Mode

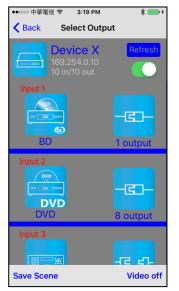

Top right 「Refresh」 to renew the status of matrix Below「Refresh」 button to power on/off the matrix

The blocks under device are Input 1~ Input 10 (4 by 4 matrix only shows Input 1~Input 4)
Left side shows input device name
Right side shows current output numbers of devices

Bottom left 「Save Scene」 to save the scenes


Bottom right 「Video off」 to turn off video output



Touch input block or \(^{\text{Video}}\) Video off \(_{\text{J}}\) to enter Output Selection page

It will show connected output of current input


Bottom left 「Unselect all」 to clear all output box Bottom center 「Select all」 to check all output box Bottom right 「Apply」 to apply output setting

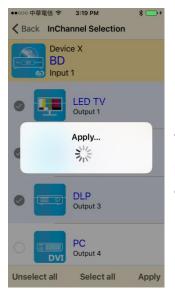

After touch 「Apply」 it will show pop-up message 「Apply...」

It will return to Input Selection page after switching and you will see the numbers of output have been changed


Save Scene

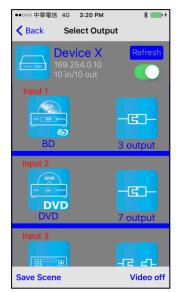

In Input or Output Selection page touch bottom left \ulcorner Save Scene $_{\rfloor}$ to enter Save Scene page



Touch the Scene column to show pop-up dialog

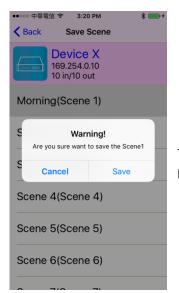

Touch \lceil Save \rfloor to save current channels setting for all output It will return to Save Scene page automatically.

Delete Matrix



Touch top right $\lceil \mathsf{Edit} \rfloor$ button to enter delete mode



Touch $\lceil - \rfloor$ button in the left of matrix



Touch 「Delete」 to delete the matrix Touch top right 「Done」 to exit

Specification

ITEM NO.	HS10M-4K6G	
Support		
Compliance	HDMI 2.0, HDCP 2.2, DVI 1.1, 3D, HDR 10, Dolby Vision, HLG	
Max. HDMI Resolution	4K@60Hz 4:4:4	
Video Bandwidth	18 Gbps	
Audio Format	LPCM 7.1@192KHz, Dolby TrueHD, DTS-HD MA	
RS232 Baud Rate	9600 bps	
IR Support	45°, 5M	
Ports & Interfaces		
Video Input	10 x HDMI Type A	
Video Output	10 x HDMI Type A	
Audio Output	2 x SPDIF	
Ethernet Interface	1 x RJ45	
RS232 Interface	1 x DB9 Female (Console)	
IR Interface	1 x (3.5mm) Phone Jack	
USB Interface	1 x USB-A (Firmware Update)	
Power		
Power Supply	DC 12V 6.67A	
Power Consumption	2.8A	
Ambient Temperature		
Operation	0 to 55℃	
Storage	-20 to 85℃	
Humidity	up to 95%	
Physical Characteristics		
Dimensions	483 x 232 x 44mm	
Weight	2920g	